Keychain-Remote Control System

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Keychain-Remote Control System is a valuable accessory for your Wireless Remote Control System. With this switch and transceiver, you can individually turn on or off lights or appliances from any location in your home. Using the remote, you can turn on and off a lamp or appliance connected to the transceiver. You can also turn on and off other lamps or appliances attached to your optional Plug 'n Power® receivers.

This remote control system is compatible with other Plug 'n Power systems and controllers, all of which are available from your local RadioShack store.

PREPARATION

1. Using a small screwdriver, set the house code dial of the transceiver and the dial of the remote (located inside the remote's battery compartment) to the same letter.

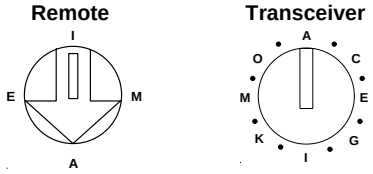

2. Set the slide switch inside the remote's battery compartment to the unit code of the lamps or appliances you want to control (1 and 2, or 5 and 6). Set the unit code on each optional lamp/appliance module to correspond to the same number setting on the slide switch.

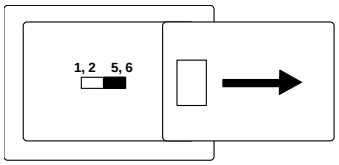

Note: Regardless of the switch setting, the transceiver always turns on a connected lamp or appliance using Button 1.

Your appliance switch requires two AAA batteries (not supplied) for power. For the best performance and longest life, we recommend RadioShack alkaline batteries.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries or different types of batteries.

Follow these steps to install batteries.

1. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Place the batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside. Then replace the cover.
3. Plug the transceiver into a standard AC outlet, then fully extend the transceiver's antenna. Plug the lamp or appliance into the transceiver. If you plug the transceiver into a switched outlet, turn the switch on.

When a lamp or appliance does not reliably respond to the remote's command, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the remote switch for several weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

RadioShack®
www.radioshack.com℠

© 1999, 2000 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

OPERATION

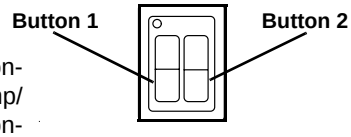

Button 1 on the remote always controls the lamp/appliance connected to the transceiver. Button 1 or 2 controls other optional modules in addition to this transceiver if you set the unit code for those modules to either 1, 2, 5, or 6. For other modules with unit codes set to 1 or 2, press Button 1. For modules set to unit codes 5 or 6, press Button 2.

CARE

Keep the remote and transceiver dry; if they get wet, wipe them dry immediately. Use and store the remote and transceiver only in normal temperature environments. Handle the remote and transceiver carefully; do not drop them. Keep the remote and transceiver away from dust and dirt, and wipe them with a damp cloth occasionally to keep them looking new.

Modifying or tampering with the remote and transceiver's internal components can cause a malfunction and might invalidate their warranty. If your remote and transceiver are not performing as they should, take them to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

Your Keychain-Remote Control System might cause TV or radio interference even when operating properly. To determine whether your system is causing the interference, unplug the transceiver. If the interference goes away, your system is causing the problem. Try to eliminate the interference by:

- moving your transceiver to a location away from the radio or TV
- connecting the transceiver to an outlet that is on a different electrical circuit from the radio or TV
- contacting your local RadioShack store for assistance

If you cannot eliminate the interference, the FCC requires that you stop using your keychain remote.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

61-2663 B
11A00
Printed in China